







FALCON PARTS

PICTURE	DESCRIPTION	PART NUMBER
	BECKETT BURNER (MAIN BURNER)	FS10072
	BECKETT BURNER (UPPER BURNER)	FS12094
	BURNER NOZZLE (.75)	FS10075
	BURNER NOZZLE (.50)	FS11543
	IGNITER KIT ASSEMBLY	FS10322
	MOTOR, WITH BLOWER WHEEL WITH COUPLER	FS32766



BLOWER WHEEL

FS11514



PRIMARY CONTROLLER DIESEL BURNER

FS10331



FUEL UNIT PUMP

FS10324



SOLENOID VALVE

FS32163



CAD CELL

FS10333



PUMP/MOTOR COUPLING

FS10703



BURNER GASKET

FS10332



STARTER KIT

FS11515



ELECTRICAL ENCLOSURE

EL10203



ELECTRICAL ENCLOSURE

EL32555



ELECTRICAL ENCLOSURE

EL31139



DIGITAL TEMPERATURE CONTROLLER

HT10133




THERMOCOUPLE 36"

EL10184




THERMOCOUPLE 24"

 EL10325

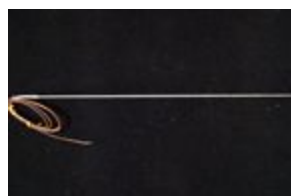

THERMOCOUPLE 18"

 EL11714

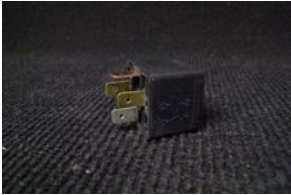

12-VOLT RELAY

EL10031



BATTERY (SRM 24)

EL10026



BATTERY BOX (SRM24)

EL10217



BATTERY TERMINAL END

EL10028



ELECTRIC BREAKAWAY

EL11521



MALE RECEPTACLE
(BATTERY CHARGER)

EL11513




JUNCTION BOX (BREAKERS)

EL11517



20 AMP BREAKER

 EL11518

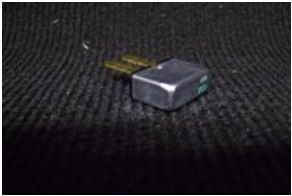

30 AMP BREAKER

EL11519



50/550 REAR THERMOMETER

HT10052



50/550 TACK TANK THERMOMETER

OP11642



ELECTRONIC FUEL GAUGE (E-F)

FS10078



FUEL GAUGE SENSOR

FS10077



REPLACEMENT FUEL FILTER

FS10705



PREHEATER FUEL FILTER

FS32260



FUEL LINE –FUEL INJECTION DIESEL

FS10241



12-VOLT TOGGLE SWITCH

EL10038




FUEL CAP

FS31151



FUEL CAP, NON-VENTED

 FS32197

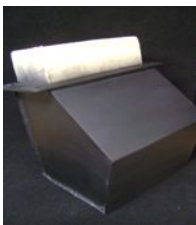

COMBUSTION CHAMBER WITH INSERT

AS32244



BURNER GUARD

MI10327



BURNER GUARD HINGE

FA10104



RUBBER BUTTON

DO31229



CHIMNEY GUARD

MI10328



MATERIAL LOADING DOOR ASSEMBLY

DO10330



MATERIAL METERING DOOR

DO10219



FLANGE BEARING

DO10115



CAM ROLLER

DO31125



LOADING DOOR HANDLE GRIPS

DO10144



MATERIAL DOOR PIN

DO32171



8-BOLT AXLE HUB CAPS

SU11512



8-BOLT WHEEL – 6” X 14.5”

SU32216



3/8” MIDLINK

TR10117



3/8” GRAB HOOK

TR10101



LOADING DOOR PIN

DO10145




ELECTRODE TIPS (DIESEL BURNER)

FS11528




IGNITER ALIGNMENT TOOL

 FS32754

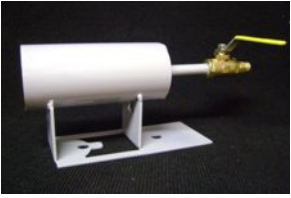

PROPANE HOPPER BURNER (105,000 BTU)

 PR10886

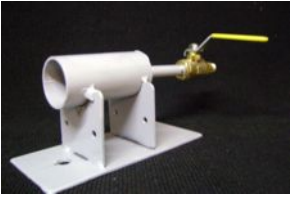

PROPANE TACK TANK BURNER (75,000 BTU)

PR10885




FENWAL

PR10880



FENWAL HARNESS

 PR10888

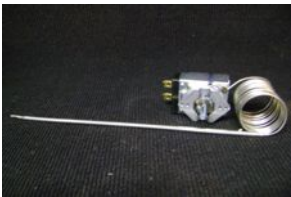

PROPANE TEMPERATURE CONTROLLER

PR32156



MARINE BATTERY CHARGER

OP13401




TACK TANK MOLASSES VALVE 1.5"

OP11640



BECKETT DIESEL BURNER TUNE-UP KITS:

 - 1) MAIN HOPPER BURNER (NO PREHEATER) KT31217
- 2) UPPER HOPPER OR TACK TANK BURNER (NO PREHEATER) KT31303
- 3) MAIN HOPPER BURNER (WITH PREHEATER) KT32218
- 4) UPPER HOPPER OR TACK TANK BURNER (WITH PREHEATER) KT32219

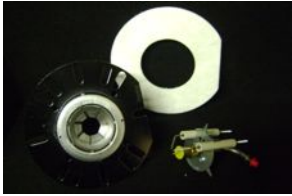


DIESEL BURNER MAINTENANCE KIT KT31218



ENVIRONMENTALLY-FRIENDLY RELEASE AGENT FL32144



 ASPHALT RECYCLING REJUVENATOR FL31307

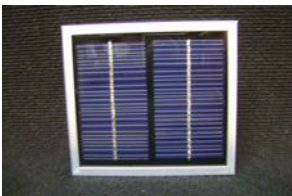

SOLAR BREAKAWAY CHARGER OP32719



HYDRAULIC CYLINDER 3 X 24 HY31318



HYDRAULIC PUMP 12V SINGLE STAGE HY31340



PENDANT W/ CORD FOR HYDRAULIC PUMP

HY32758



EMERGENCY STOP BUTTON

OP13413



EMERGENCY STOP BUTTON TAG

OP13414



FIRE EXTINGUISHER BRACKET 5LB

OP11738



FIRE EXTINGUISHER BRACKET 10LB

OP11742



MARKER LIGHT LED AMBER

LI11682




MARKER LIGHT LED RED

LI11683



GROMMET 4" ROUND

 LI11685

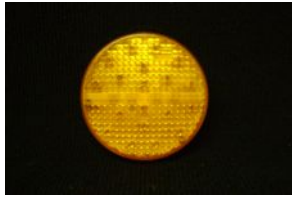

STROBE LIGHT 4" ROUND

LI11677



STOP/TAIL/TURN LIGHT 4" ROUND LED

LI31229



ID BAR

LI10692